

MOTORCYCLE BAR MOUNT INSTRUCTIONS




more info

pkdsn.com/motobarmount

GET TO KNOW YOUR MOUNT

requires Peak Design Case
not included

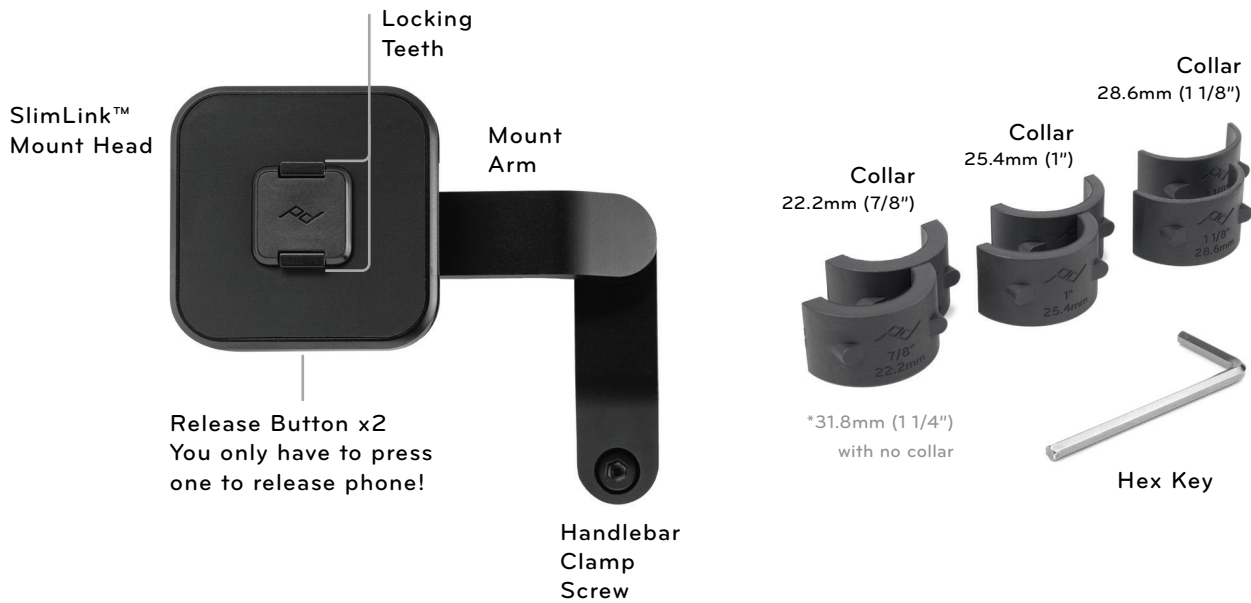

INSTALLATION



1. Use provided Hex Key to remove the screw on the **Handlebar Clamp**. Next, loosen both screws on the bottom of the **Arm** such that the arm pivots at two points.



2. Select a location for the **Bar Mount**. Rotate the **Arm** and **Head** to desired angle, tighten **Arm** in place. Then, tighten **Handlebar Clamp**.

See **Armless Mount Option** for a low-profile mount option.



3. If needed, add a **Collar Set** to fit your handlebars. Push each **Collar** half into the corresponding notches on the **Handlebar Clamp**.

Note: With no collar the mount fits 1-1/4" bars.



4. Lastly, tighten the **Handlebar Clamp Screw** to secure the mount in place.

Max torque: 4 N•m.

ARMLESS MOUNT INSTALLATION


Mount direct to handlebar with no Mount Arm



1. Detach the Mount Arm by removing both screws from the underside of the Arm.




2. Reinstall the SlimLink™ Mount Head directly to the Handlebar Clamp.

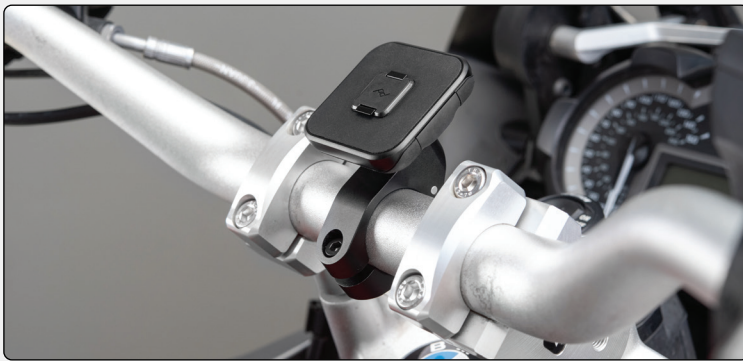

3. Mount in the armless configuration per the installation instruction. Jump to step 3 on installation instructions and proceed.



USE

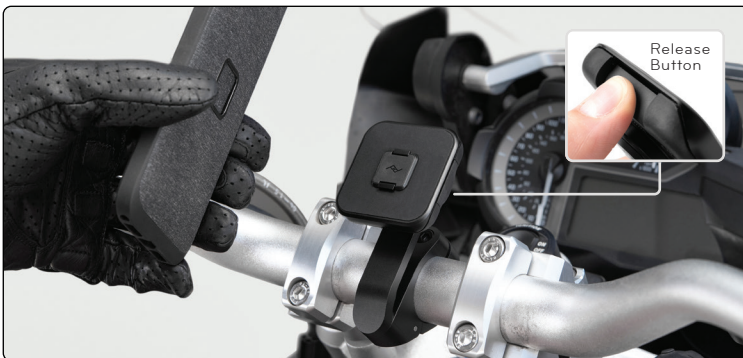

Attach/Detach Phone

To attach, place phone on mount and listen for "click" to ensure phone is locked. Requires **Peak Design Case** (sold separately).

To remove, push just one of the **Release Buttons** and pull phone outward.



Warning!

Screws may loosen over time due to vibration. Periodically check screw tightness.

! Stay safe. Do not interact with or remove phone from the mount while in motion.